


Changing Over Stock Length


The Over Stock Length inside CADS RC is set to 12000mm by default. Occasionally you may need to override this length, the example below changes the length to 14000mm. You will need to edit three RebarCAD variables in order to achieve this, please carry out the following steps

1. Launch CADS RC
2. If the setting is required for a specific drawing open the drawing.
3. Select the Configuration Centre
4. Select Global / General Configuration
5. Select Bars on the top field, highlight "MaxDimensionLength" in the middle field
6. Type in the new maximum length in the lower field and click Assign to CFG

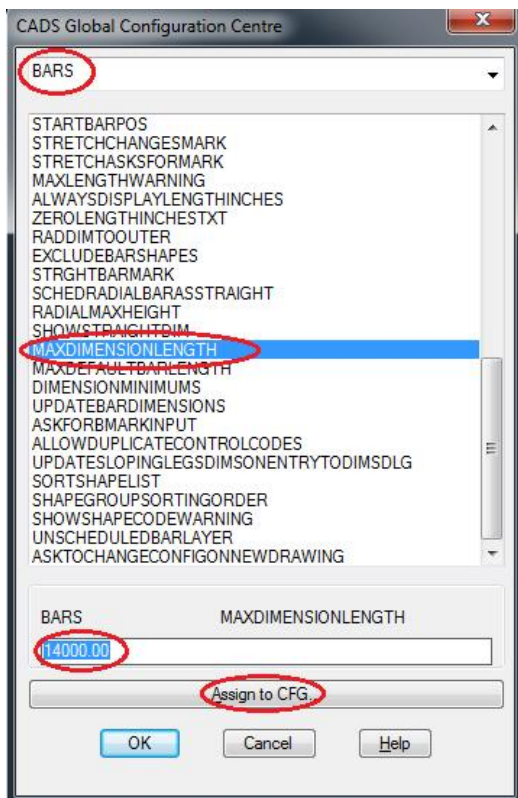


7. Next select StockBars in the top field, highlight "MaxStockLength" in the middle field


8. Type in the new maximum length in the lower field and click Assign to CFG

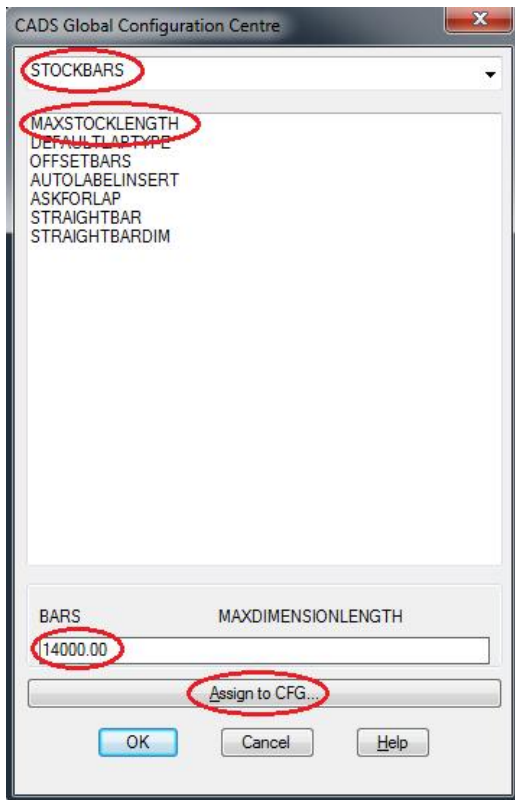

9. Then select "OverStockLength" in the top field. Highlight "MaxStockLength" in the middle field
10. Type in the new maximum length in the lower field and click Assign to CFG and then OK

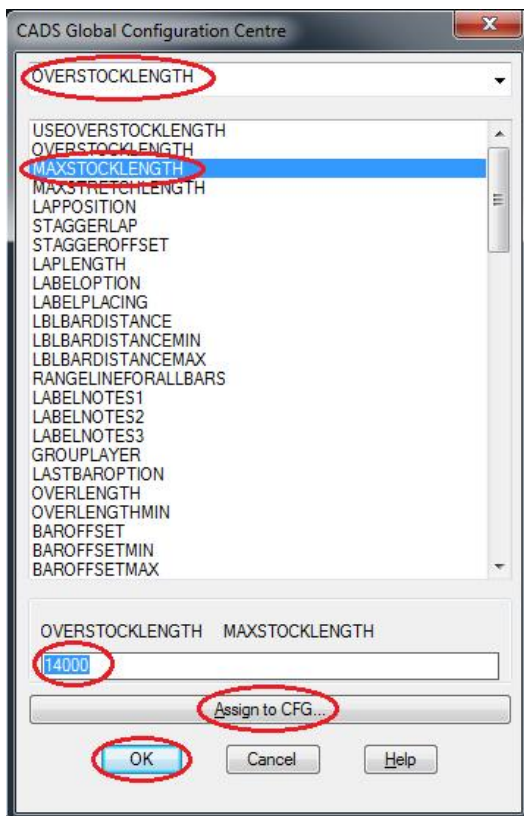

11. Answer yes to applying the changes

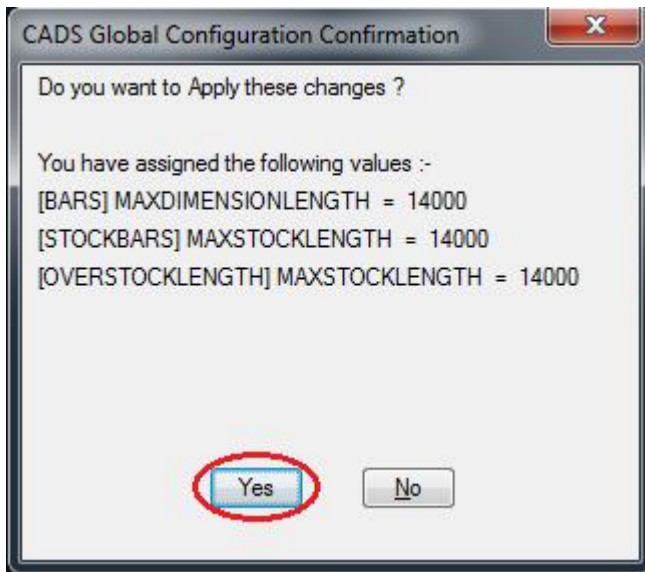

12. This will apply the settings to the current drawing.

If you want to save the changes so that they apply to all new drawings you will need to write prototype settings.

13. Open the Configuration Centre

14. Select Miscellaneous Configuration

15. Click on Write Prototype Settings

16. Answer Yes to continue and Ok to the message below.

